



HOW TO ASSEMBLE YOUR TALISMAN SIEVE

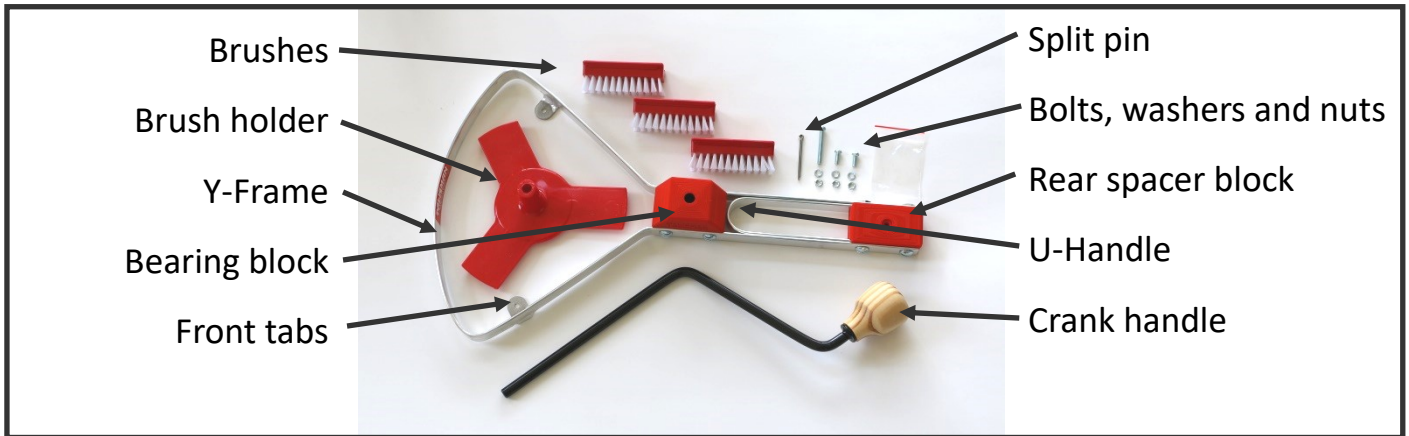

1. Remove the bolts through the rear spacer block.

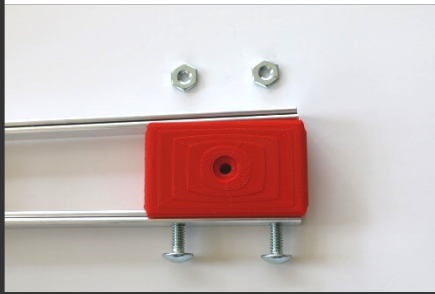


2. Turn the U-handle around. The handle goes inside frame.



3. Reinsert and tighten the bolts.




4. Insert the crank handle down through the bearing block.

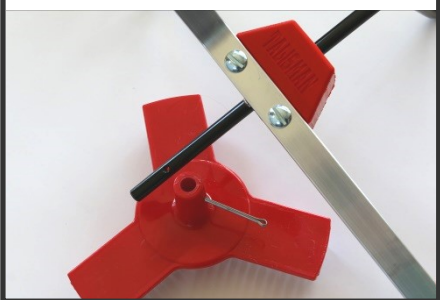


5. Push brush assembly onto crank handle and align holes.



6. Insert the split pin and bend the ends around either side.

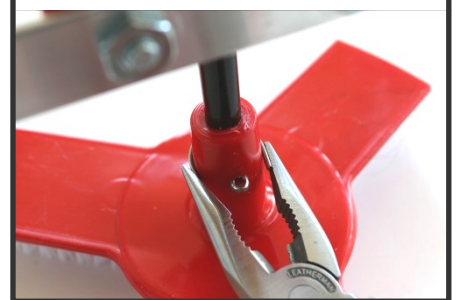

7. Place frame onto bowl. It may be necessary to push/pull the frame to align the holes.

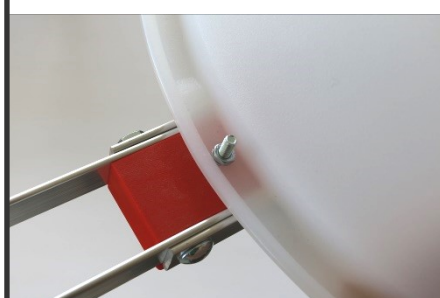

8. Insert bolts through frame tabs, rear block and bowl. Add washers and nuts, tighten.



9. Push the sieve screen into place, being careful to push on the rubber outsides only.

